


VALVE PARTS

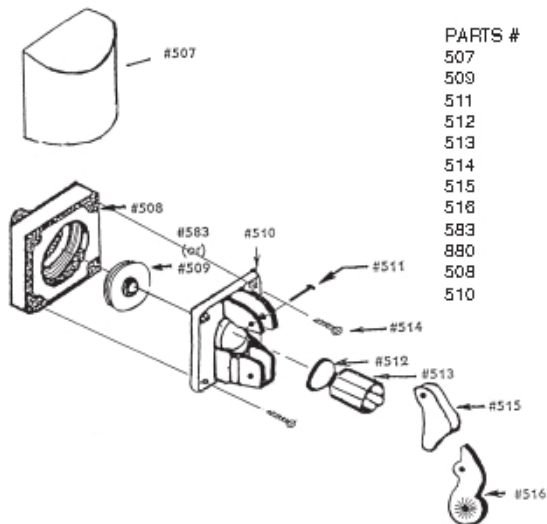

PARTS #	DESCRIPTION
507	Cap
509	L.P. orifice 3/8"
511	Lock pin
512	Plunger seal
513	Plunger
514	Base screw
515	Upper arm
516	Lower arm
583	HP orifice 3/16"
880	Backup ring for orifice
508	Bottom Base
510	Top Base